


1

Positioning the brackets




The position that you place the outer most brackets must be 5cm away from the end of the rail. Any additional brackets (supplied for wider blinds) can then be evenly distributed across the rest of the window space. Use a pencil to mark the window area where the brackets will be positioned.

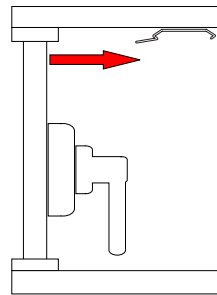

Ensure that the back of the bracket sits clear of any protruding items such as window handles or window vents. This will allow the blind to hang correctly once installed.


2

Fitting the brackets

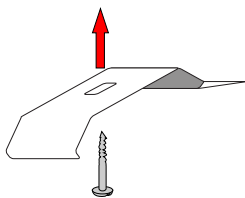

Top-Fixing

Use the single hole on the top of the bracket for fixing to the ceiling or the underside of a recess. The protruding tab should sit at the back, closest to the window.

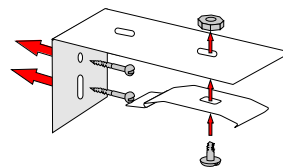


Face-Fixing


Join the bracket to the 'L' shaped face-fixing plate. Use two screws through the back plate to mount the brackets to the facing surface behind the blind.

3

Fitting the blind

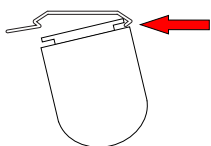

Situate the front lip of the head rail into the front of the bracket.

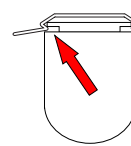



Push the back of the head rail upwards to engage the metal clip at the back of the bracket.

4

Child Safety Device Installation

Our blinds are provided as standard with a compliant child-safety device (cord-guide), which must be installed.

This is designed to ensure that the operating cords cannot form a loop equal to or greater than 220mm, less than 1600mm from floor level, safely preventing any risk of accidental strangulation.

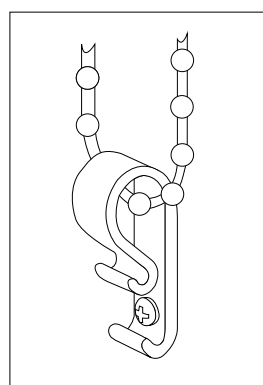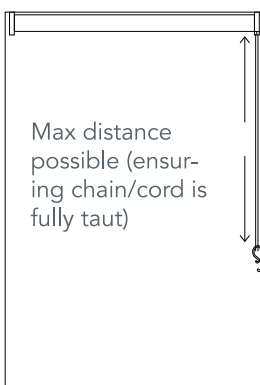


Hold the device against the wall and mark the location of the screw-holes with a pencil.

The cord must be taut, to ensure that should the device be less than 1600mm from floor level, a loop of 220mm length or greater cannot form.


Attach the cord-guide securely to the wall using the fixings provided.

It is designed in such a way that, so long as the cord is taut, the cord cannot be removed without removing the device.

Additional Information

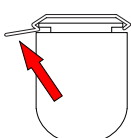

To release the blind from the brackets, press the tab at the rear of the bracket upwards to disengage the rail.

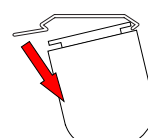

Bring the rear of the head rail downwards. The blind will then release from the bracket.