



1

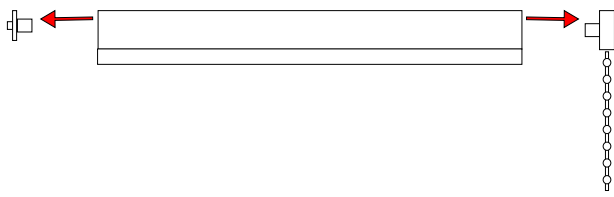


We will have positioned the controls where you requested during the ordering process. However if you decide to swap the side that they are on, direction of the roll or need to trim the blind further, the controls can be removed by simply unplugging them from the tube. This should be done prior to fixing the brackets.

2

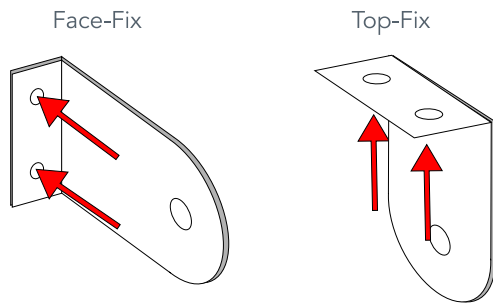

The brackets that are supplied with your blind enable you to face-fix the blind onto a wall/window frame, or top-fix the blind onto the ceiling/underside of a recess.


3

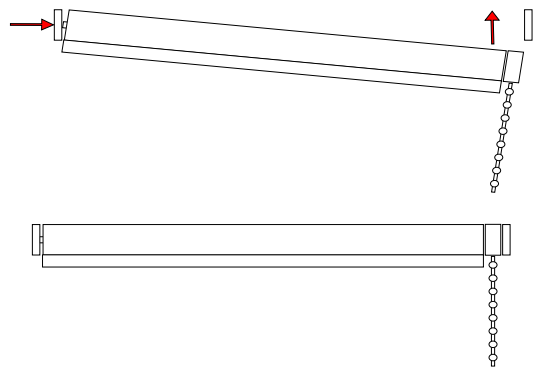

When the brackets have been fitted to the window area, locate the 'pin' (the end of the blind opposite to the controls) into the bracket first. Then fix the control end into the opposite bracket.


4

Standard Reverse

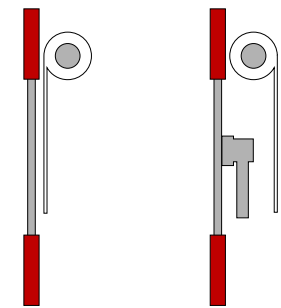

Roller blinds can have the fabric rolled onto the tube in two directions. The first is referred to as a 'standard' roll. This will place the fabric closest to the window or wall so that it comes down at the back of the tube. This is typically used with blackout blinds when they are mounted outside of a recess, the standard roll meaning that there is less light leakage.

The second method is referred to as a 'reverse' roll, this places the fabric so that comes down at the front of the tube, effectively hiding the pole away. This way of rolling the blind will allow clearance for window handles and other obstructions if you mount the blind inside a recess.

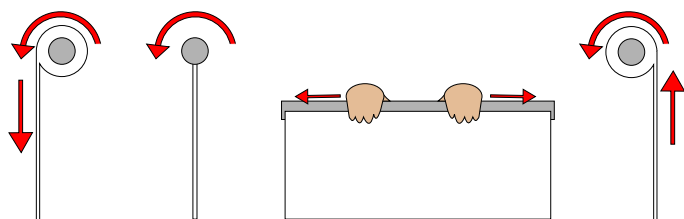



If you wish to change the roll method, unroll the fabric fully so that you can see the aluminium tube. Keep turning the tube in the same direction so that the fabric starts to roll up on the opposite side. Run your hands along the fabric to loosely form a fold so that the fabric sits closer to the tube and continue rolling the fabric back up.

Child Safety Device Installation

5

Our blinds are provided as standard with a compliant child-safety device (cord-guide), which must be installed.

This is designed to ensure that the operating cords cannot form a loop equal to or greater than 220mm, less than 1600mm from floor level, safely preventing any risk of accidental strangulation.

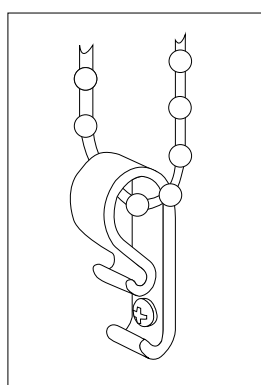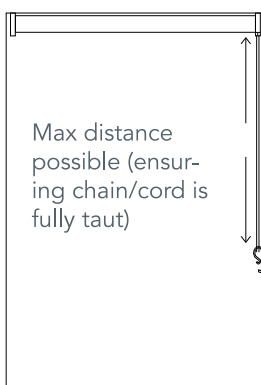

Hold the device against the wall and mark the location of the screw-holes with a pencil.

The cord must be taut, to ensure that should the device be less than 1600mm from floor level, a loop of 220mm length or greater cannot form.

Attach the cord-guide securely to the wall using the fixings provided.

It is designed in such a way that, so long as the cord is taut, the cord cannot be removed without removing the device.