 



1

Face Fix



Top Fix

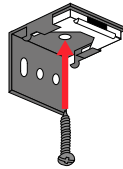


Face-Fix:

Use this method to mount the blind to the surface directly behind the blind (commonly the wall or the window frame), use two screws for each of the brackets.

Top-Fix:

Use this method to mount the blind to the surface directly above the blind (commonly the ceiling or the lintel of the recess), only one screw per bracket is required for top-fixing.


2

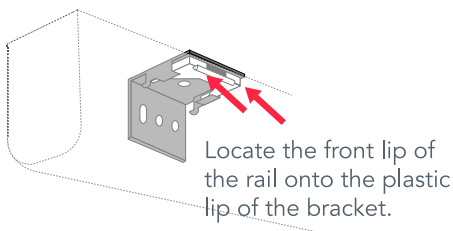

To attach the blind to the brackets, hold the rail at a slight angle and locate the front lip of the rail onto the plastic lip of the bracket. Then gently push the towards the back of the bracket while straightening the angle of the rail to lock the rail into place.

To remove the rail, simply push the rail towards the back of the bracket and twist the rail downwards at the back, it will disengage the hooks at the back of the bracket and allow the blind to be taken down.

3

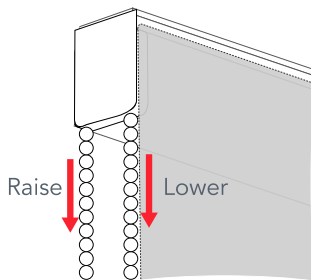

Pull down on the rear part of the chain to raise the blind.

Pull down on the front part of the chain to lower the blind.

Even though the chain is a continuous loop, if you inadvertently pull the chain in the wrong direction (i.e. the front to raise the blind), the blind will raise at an uneven angle. To rectify this lower the blind fully and then simply use the rear chain to raise the blind and level it again.



Do not untie the cords at the back of the blind to adjust the level, only use the chain.

4

Child Safety Device Installation

Our blinds are provided as standard with a compliant child-safety device (cord-guide), which must be installed.

This is designed to ensure that the operating cords cannot form a loop equal to or greater than 220mm, less than 1600mm from floor level, safely preventing any risk of accidental strangulation.

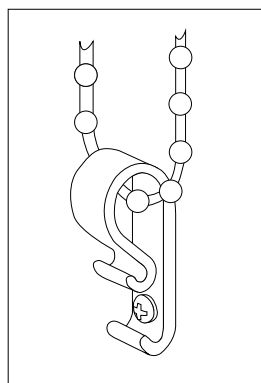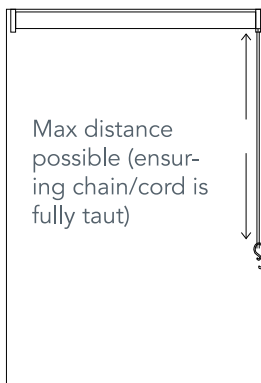

Hold the device against the wall and mark the location of the screw-holes with a pencil.

The cord must be taut, to ensure that should the device be less than 1600mm from floor level, a loop of 220mm length or greater cannot form.

Attach the cord-guide securely to the wall using the fixings provided.

It is designed in such a way that, so long as the cord is taut, the cord cannot be removed without removing the device.