



1

Face Fit

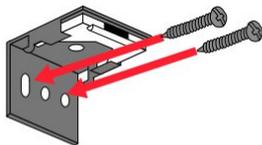

Recess/Top Fit

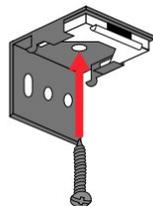


Face Fit

Use this method when mounting the blind to the wall above your window or to the architrave (depending on where you have measured from). With a pencil and a stud finder, mark where you are going to mount your brackets. Use two screws for each of the brackets.

Recess or Top Fit

Use this method to mount the blind to the surface directly above the blind (usually architrave of the recess). Only one screw per bracket is required for Top Fitting.


2

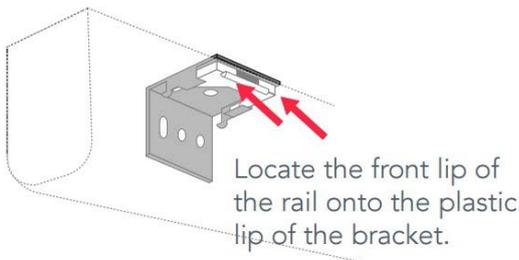

To attach the blind to the brackets, hold the rail at a slight angle and locate the front lip of the rail onto the plastic lip of the bracket. Then gently push towards the back of the bracket while straightening the angle of the rail to lock the rail into place.

To remove the rail, simply push the rail towards the back of the bracket and twist the rail downwards at the back. It will disengage the hooks at the back of the bracket and allow the blind to be taken down.

3

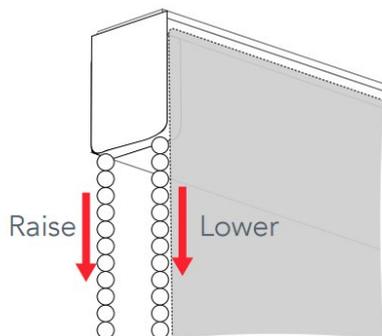


Pull down on the rear part of the chain to raise the blind.

Pull down on the front part of the chain to lower the blind.

Even though the chain is a continuous loop, if you inadvertently pull the chain in the wrong direction (i.e. the front to raise the blind), the blind will raise at an uneven angle. To rectify this, lower the blind fully and then simply use the rear chain to raise the blind and level it again.

Do not untie the cords at the back of the blind to adjust the level, only use the chain.

4

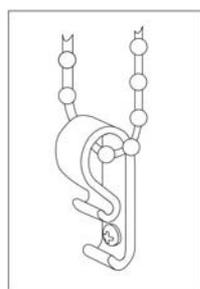

Child Safety Device

The cord retaining device must be installed at the maximum distance possible from the control mechanism to prevent looped cord(s) becoming slack.

Place retaining device on the wall and mark the position of the hole using a pencil.

Attach retaining device using suitable fixings ensuring the device is fully closed.