



### Item Checklist

- Roman Blind
- Brackets & Screws
- Cleat to tie off cords.
- Cord Tidy for Chain Driven Blinds

### Tools you will need

- Cordless Drill with Philips head drill bit
- Metal Tape Measure

It is important to securely attach the brackets to the mounting surface. To achieve this the included screws must secure into wood studs, otherwise a fastener is required for secure mounting (not included) Make sure the fastener you purchase is suitable for the weight of the product.

Plaster:	Timber:	Concrete, Stone, Brick or Tile:
We recommend the use of The Ramset 10mm Grip Hollow Wall Anchor	Pre-drill holes and use the included screws.	Use a masonry drill and appropriate plugs, anchors or screws.

### Positioning Brackets -

The position of the brackets will be determined from the height of the blind where you measured from.

If you have allowed for your blind to be mounted above the architrave, measure the height you allowed for, then mount your bracket 20mm below this mark. E.g. 150mm = 130mm above. This will allow for the Headrail of the blind to be raised above the bracket and to give you the 10mm clearance from the floor.

Position your outer brackets approximately 50mm in from the edge of your blind, making sure to avoid pulleys and control mechanisms. Space central brackets evenly across the width of the blind.



**Bracket Position** - The roman Blind bracket needs to be mounted with the longer edge to the wall or architrave. (see image)


Fixing a screw into the central hole will allow you to make minor adjustments, by sliding the bracket up or down until you reach the desired height or level.

### Positioning the Blind

**Important** - Make sure your hands are clean before touching the blind.

Lift the Roman Blind into place by sitting onto the top of the bracket. Position the blind so it is sitting evenly on the brackets and central to the window.

Do not attempt to lift wide widths without fully supporting the headrail. Failure to do so may result in the

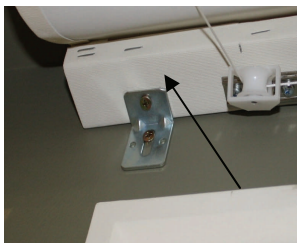

Starting at the central bracket, drill a screw up through the bracket directly into the headboard of the blind as shown in the photo. Repeat for all brackets.

If butting blinds together make sure to leave a 10mm gap between the blinds. Failure to do so will cause blinds to catch when operating.





### Important for Child Safety - Installing the Cord Cleat

The cleat needs to be secured to keep the cords safely out of harms way and by law is required to be positioned no lower than 1.6m from the floor. Make sure cords are always wound around the cleat and never left loose on the floor. Failure to do so can result in child or pet strangulation. Never position a bed or cot next to a blind/window.

Simply screw into position, slightly wider than the blind to allow ease of operation. You may need to use hollow wall anchors if there is not a stud to secure to.

If mounting your blind directly onto the architraves, you will need to position the cleat on the wall beside the architrave as shown in the image.

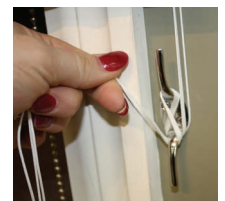

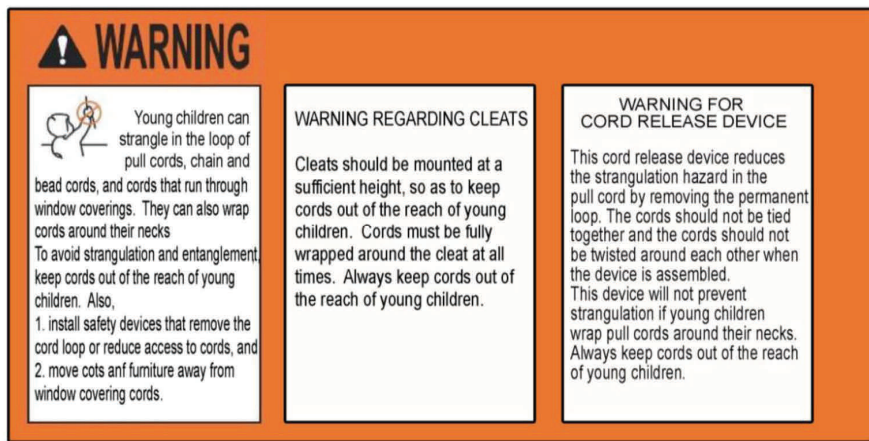

## Installing a Roman Blind with a Chain Drive

Position the brackets as instructed on previous page.

Unclip the chain drive from the headboard of the blind. Make sure to position brackets so they do not obstruct with the chain drive brackets already on the Headrail.

Allow the chain drive to hang freely whilst positioning the headboard to the brackets.

Once the blind is evenly positioned and screwed into place, re clip the chain drive back into the brackets.

Secure the chain with the cord tensioner. If positioning onto the wall and can't locate a stud, use a hollow wall anchor for correct fastening.

Allow a slight amount of slack onto the chain but do not allow the chain to form a loop more than 220mm.



## Operation of Blind

**Cord & Cleat**— Secure the blind at the desired height by winding the cord around the cleat. To ensure the blind is level make sure to hold tightly to all cords when operating.

Do not leave cords hanging in reach of children, always hook the acorn onto the cleat when not in use.

**Cord lock**— To operate the blind, release the blind by tugging the cord downward, then lower/raise the blind to the desired height. Lock into place by tugging the cord downward. Wind cords around cleat to keep out of harms way when blind not in operation.

When operating your blind make sure not to lift the blind too high when locking into place, as this will not leave any cord to release the locking motion with, and will result in the blind jamming. If this does occur, hold the pack out horizontally, taking the weight off the blind and gently pull the cord to unlock.

**Chain Drive**— Simply rotate the chain to the desired height., making sure to not pull the chain diagonally in the cord tensioner.

## Handy Hints

- When installing large blinds, it helps to have someone support the blind when lifting onto the brackets. This also helps prevent the headrail from breaking and voiding the warranty.
- To clean regularly dust with feather duster or brush attachment on vacuum.
- To remove marks, we recommend Chux Magic Erasers. Making sure not to scrub hard at the cloth.

For further information please contact our customer service team Monday to Friday 9am to 5pm

**Phone:** 1300 761 179 or **Email:** sales@blindsonline.com.au

**Choose. Measure. Order. Install. Easy.**