



Always use a metric metal tape measure

Corner Window


At a Glance

- \* We require your measurements in millimeters
- \* Write the width x drop
- \* Make sure to take the deduction off the butt blind, to allow for the distance of the through blind.

Corner Windows

When mounting your blinds into a corner window, one blind will run through and one blind will butt into the other blind, as shown in the diagram below.

First you must decide which blind will be the one to run through. We generally recommend that the blind running through is the one that is facing the front of the house or where you want to achieve the most privacy, to stop vision down the gap between the butting blind.

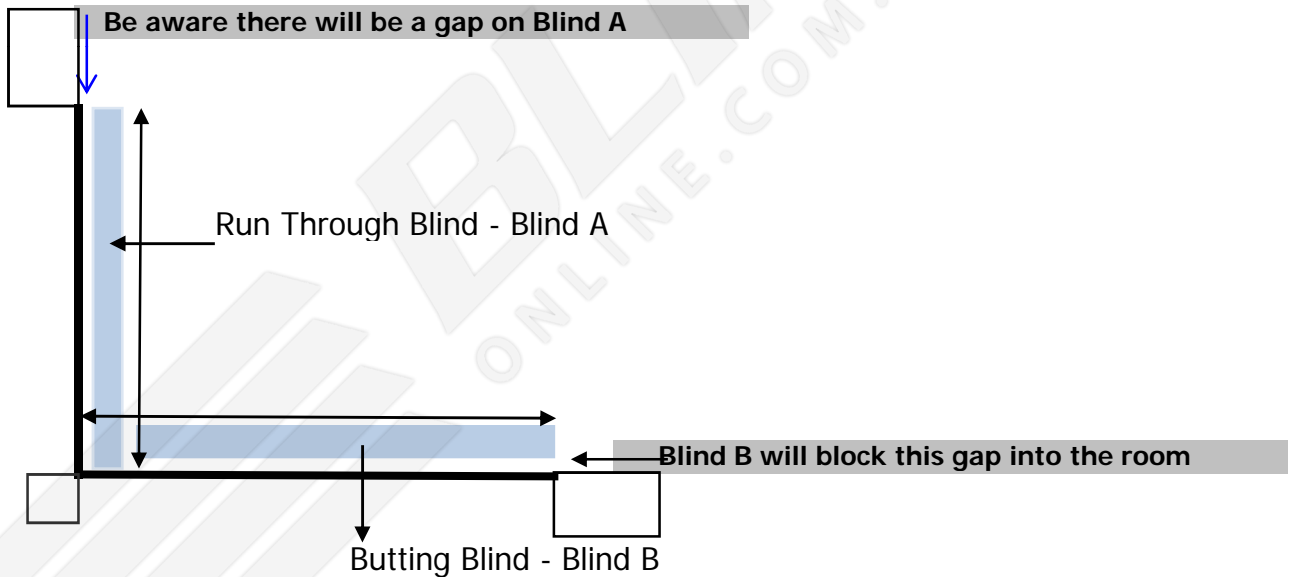

**Important** - When ordering your blinds the measurement must have the projection depth subtracted from the butt blind to obtain the proper ordering width. You will be ordering the finished blind size. This distance to be subtracted will depend on the type of product. See chart below

| Product                  | Projection Depth |
|--------------------------|------------------|
| Roller Blind Std         | 80mm             |
| Roller Blind Heavy Duty  | 95mm             |
| Double Roller Blind 48mm | 140mm            |
| 63mm Timber Venetian     | 75mm             |
| 50mm Timber Venetian     | 65mm             |

| Product                      | Projection Depth     |
|------------------------------|----------------------|
| Panel Glide                  | Varies to track size |
| Slimline Blind               | 35mm                 |
| 50mm Alum. Venetian          | 65mm                 |
| 127mm or 89mm Vertical Blind | 100mm                |
| Roman Blind 40mm headboard   | 45mm                 |

Panel Glide & Roman Blind projections will vary and will require further discussion with our consultants

**For further assistance contact our sales consultants  
Ph: 1300 761 179**