


Measuring for Panel Blinds

At a glance

- Always use a metal tape measure
- Always write down your measurements width x drop. Take care not to reverse them.
- We require your measurements in millimetres
- Measure every window, as they may have a slight variation that will effect your window furnishing from fitting perfectly

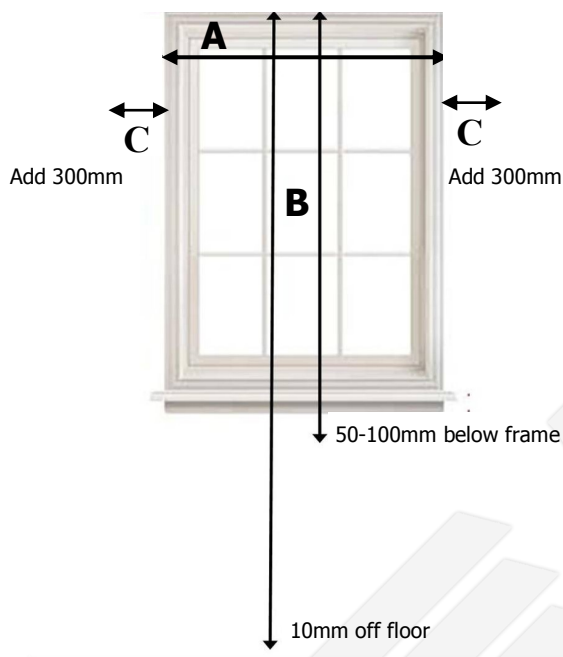

How to Measure For Face Mount (outside the window frame)

A. Measure the width from the outer edge of the architrave to the opposite edge

B. Measure the drop from the top of the architrave to where you want the blind to finish. We recommend 10mm off the floor and 50-100mm below the frame.

C. We recommend that you take the track past the architrave each side. This will give more privacy and better light control. The distance you take the track is entirely optional. We highly recommend that you add at least 300mm, to enable the panels to clear the glass as much as possible. Each panel is 600mm wide. Make sure that you don't have any obstructions such as light switches or bookcases etc.

For further assistance contact our customer service team
Ph: 1300 761 179 Monday to Friday 9am to 5pm