

1


Positioning the brackets



Position the blind at the window and tilt the head rail forwards so that you can see inside. Ensure that the brackets are positioned so that they are clear of the tilt drums before you begin the installation.


2

Fitting the brackets

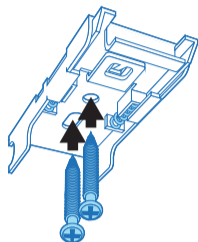

Top-Fixing

Use the holes in the top of the bracket for fixing to the ceiling or the underside of a recess.

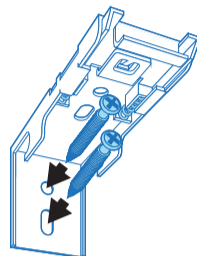


Face-Fixing


Use two screws through the back plate to mount the brackets to the facing surface behind the blind.

3

Fitting the blind

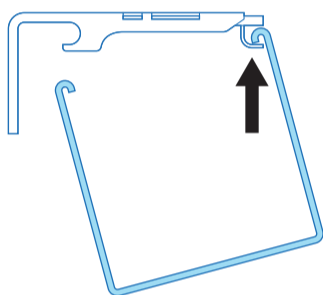

Locate the front lip of the head rail onto the front hook of the bracket.

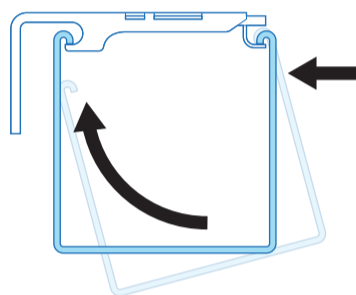

Push back against the head rail whilst twisting the back upwards to lock it into place.

4

Child Safety Device Installation


Cord safety cleat

Our blinds are provided as standard with a compliant child-safety device (cord safety-cleat), which must be installed. This is designed to ensure that the operating cords cannot form a loop equal to or greater than 220mm at less than 1600mm from floor level, safely preventing any risk of accidental strangulation.


The safety cleat shall be installed as close to the headrail as possible and **in all cases not less than 1600mm from the floor**, because a child is capable of unwinding a cord from a cleat.

The cord must be fully accumulated around the safety cleat(s) when the blind is not in use. Use the table below to determine the distance required between the cleats to fully accumulate the cords when the blind is fully raised.

Drop of Blind	*Distance between cord cleats (centre to centre)
1-1000mm	100mm
1001-2000mm	150mm
2001-3000mm	300mm

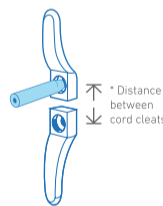

Place the safety cleat in the desired position on the wall and mark the positions of the holes with a pencil.



Mark the hole positions and drill as required.

Use the screws provided to attach the safety cleat to the wall.



Wrap the cords around the cord cleats in a figure of 8. When the cords are fully accumulated ensure they are secure so when any cord is pulled no excess cord is released.

Hold-Down Clips

As a requirement for child safety, our Venetians have to be fitted with hold-down clips. Place the clips at the bottom of the window area so that they line up with the bottom of the blind when it is in the 'down' position. Screw the clip to the window sill or the wall (the side of the recess) with a single screw and a wall plug if installing into plaster.

'Click' the pegs on the bottom bar into the cups on the clips to secure the blind.



Fitting to Sill



Fitting to Wall

