



Mount the cassette

1

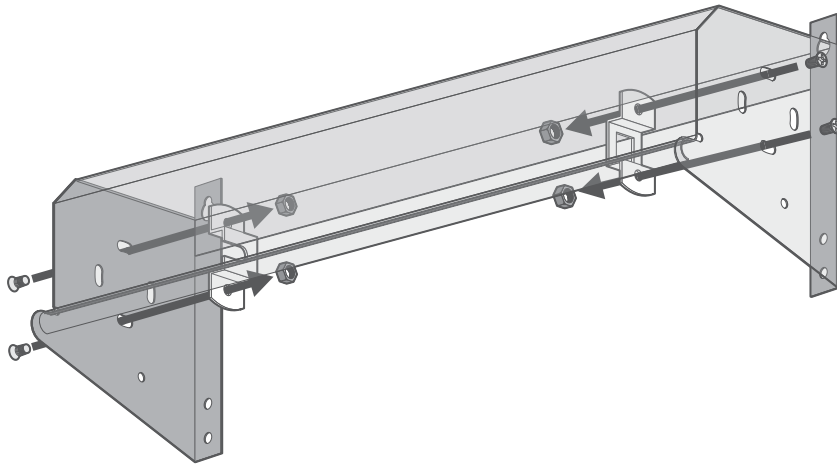


Mount the roller plates to the inside of the cassette, as shown. Use 2 nuts and bolts per plate.

Mount both of the roller plates vertically. The pin-end roller plate should have its notch facing the front of the cassette.

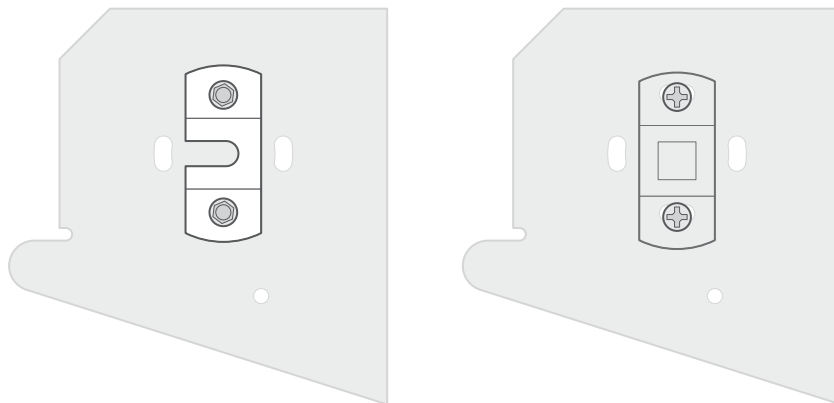


Attach the roller plates

2

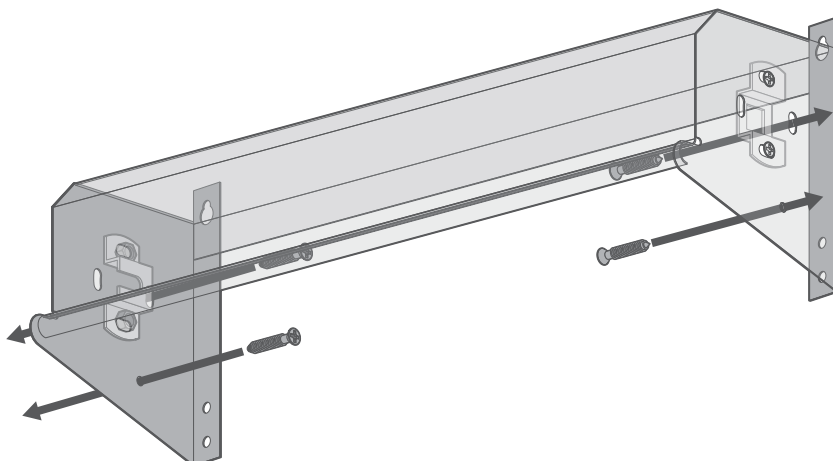


Use 4 screws to mount the cassette to the inside walls of the recess. The cassette will be the 'cover' for the blind.

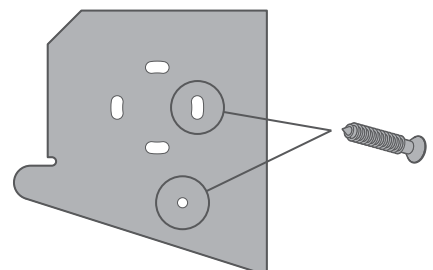


Fit the blind


3

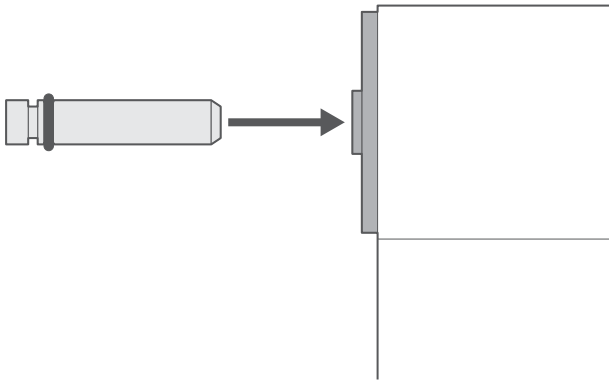


Start by inserting the roller 'pin' in the end of the blind opposite to the motor side. Note that the rubber 'O' ring on the pin should be resting inside the innermost of the two cutout sections.

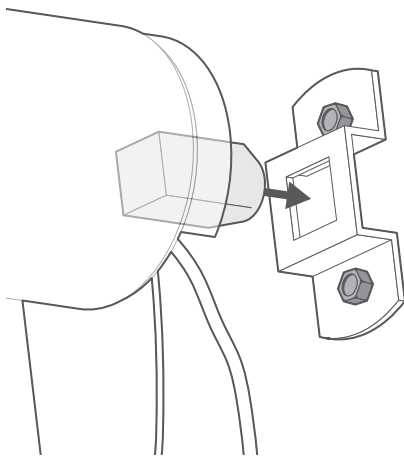


Now raise the blind up into the cassette and slot the square 'peg' on the motor side into the square slot in the roller plate.


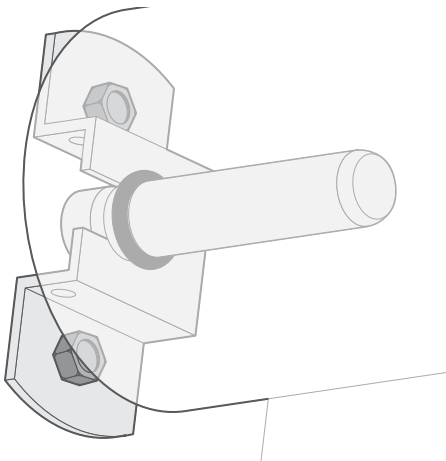


Raise the other end of the blind and slot the roller pin forward into the slot on the other roller plate. Insert the R clip by pushing it up into the holes on the side of the roller plate.


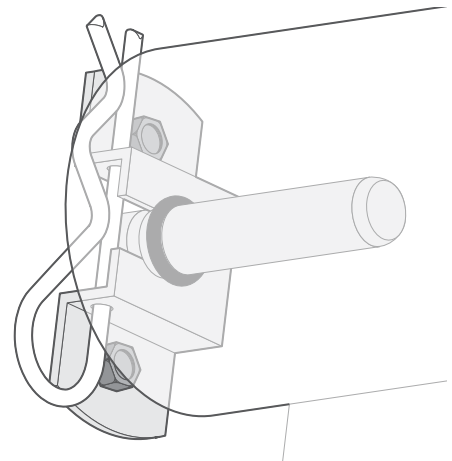


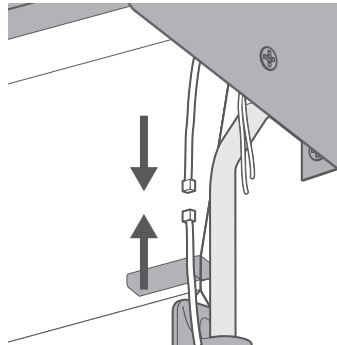


Clip the motor and power leads together. The power lead can then be plugged into an external outlet, or an extension cable running from inside.

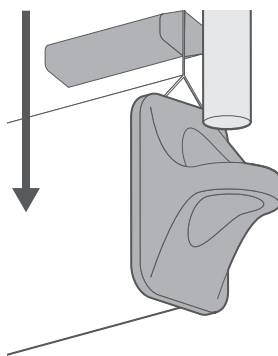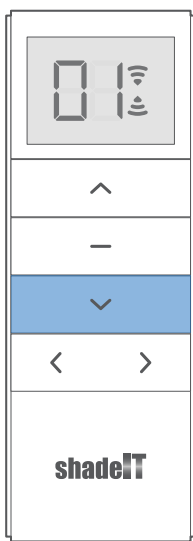

Use the remote to lower the blind. Allow it to lower until the eyelets on the ends of the bottom bar are lower than the bottom of the side runners.

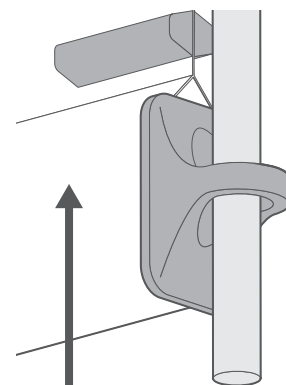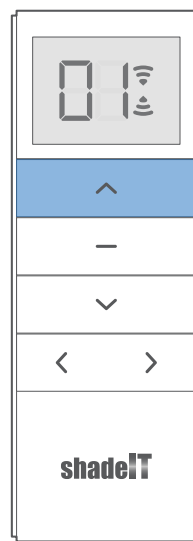

Feed the eyelets on the ends of the bottom bar up onto the ends of the side runners, then use the remote to raise the blind slightly.

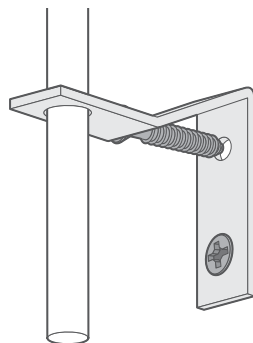


Feed the L-brackets onto the bottom of the side runners and fix them in place with 2 screws each.





Before screwing the L-brackets into place, ensure that the side runners are aligned in such a way that the eyelets on the ends of the bottom bar are not touching the runners. This will prevent the blind from sticking as it raises and lowers.

Set the motor limit points

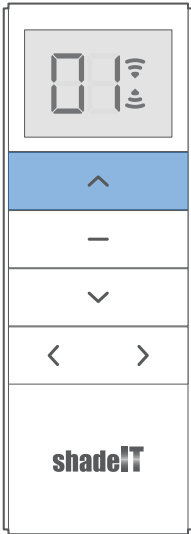

Use the up button to raise the blind until it's close to where you want your upper limit to be, then hit the stop button. Press the up button repeatedly until the blind is exactly where you'd like. To set the upper limit, press and hold both the up and stop buttons together. The blind will 'jog' a couple of times to acknowledge that the stop point is set.

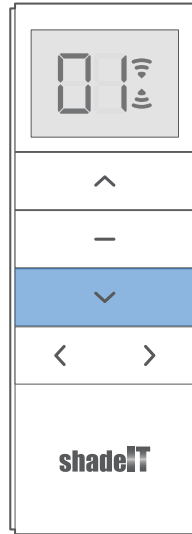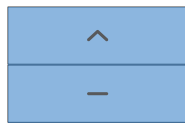

To set the lower limit, hold the down button and let the blind lower. When it gets close to the bottom, press the stop button. Press the down button repeatedly to jog the blind down until the bottom bar is as low as it can go without directly resting on the L-brackets you installed in step 3. Press and hold the down and stop buttons together until the blind jogs again to acknowledge the lower limit point.

